


ASSEMBLE YOUR REFLEXX PLATFORM!



10 MINUTE
ASSEMBLY

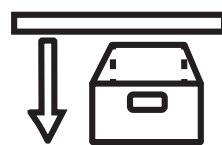



STORAGE
UNDER THE BED



SUPERIOR STRENGTH

CONTENTS

PLATFORM

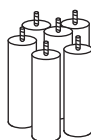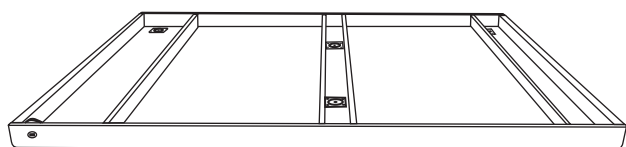



5 LEGS FOR THE 39" AND 39"XL SIZES
6 LEGS FOR THE 54" AND 60" SIZES

1 UNWRAP THE COMPONENTS. LAY DOWN THE REFLEXX PLATFORM, TOP DOWN, ON THE GROUND.

2 TIGHTLY SCREW THE LEGS ON THE METAL PLATES. USE THE SMALLEST LEG(S) IN THE CENTRE OF THE PLATFORM. (LEAVE 1/8 INCH GAP BELOW THE CENTRE LEG(S))


3 IF YOU HAVE DRAWERS, YOU WILL FIND THE ASSEMBLING INSTRUCTIONS IN THE DRAWER BOX.

IF YOU DON'T HAVE DRAWERS, TURN THE REFLEXX BED FRAME OVER ON ITS LEGS. WE RECOMMEND THAT 2 PEOPLE FLIP THE REFLEXX TO AVOID PUTTING STRAIN ON THE LEGS AT AN ODD ANGLE.

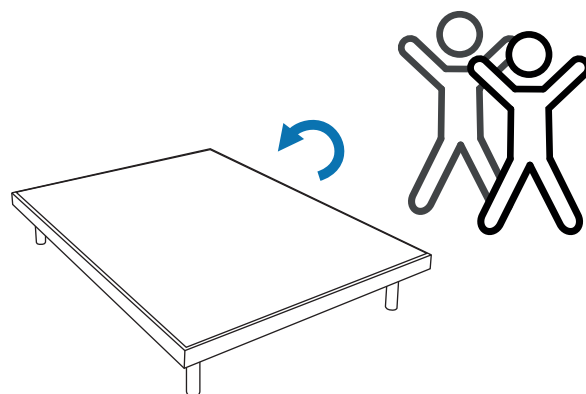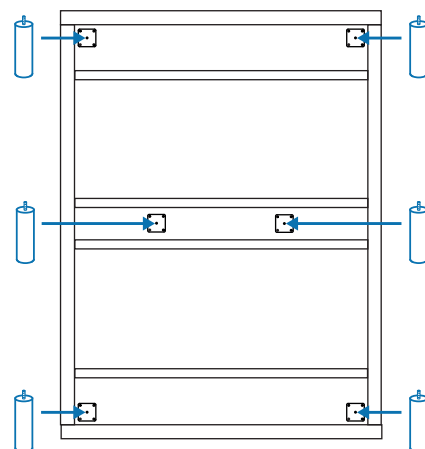


4 IF YOU HAVE A SPLIT QUEEN (30"XL) OR SPLIT KING (39"XL) SIZE REFLEXX PLATFORM (HARDWARE INCLUDED IN THE BOX)

PUT BOTH PLATFORMS SIDE BY SIDE SO THE HOLES AT THE HEAD AND FOOT ARE ALIGNED. YOU WILL NEED TO PUNCTURE THE FABRIC TO ACCESS THE HOLES (SEE NOTE). USE THE $\frac{1}{4}$ X 2 $\frac{1}{2}$ " BOLTS TO SECURE THE TWO BASES TOGETHER BY PUTTING A WASHER ON EACH SIDE. NOW SCREW ON THE NUT AND TIGHTEN SECURELY.

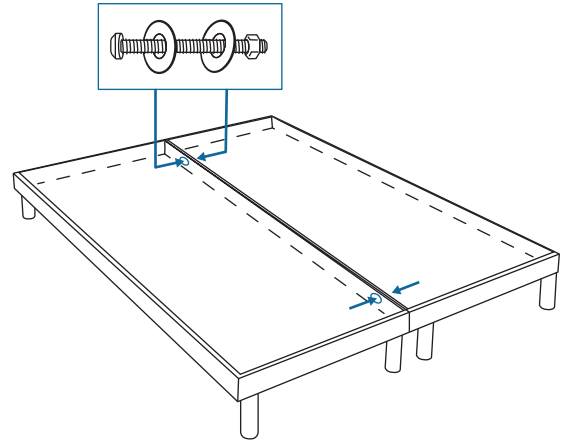

5 IF YOU HAVE A HEADBOARD

INSTALL ASSEMBLY PLATES (SOLD SEPARATELY) TO THE HEAD SECTION OF THE REFLEXX.
USE 8 X $\frac{1}{4}$ " - 2 $\frac{1}{2}$ " BOLTS AND 8 X $\frac{1}{4}$ " NUTS.

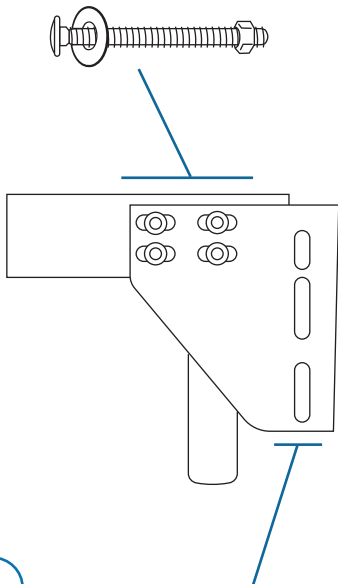


NOTE: THE ASSEMBLY PLATES ARE UNIVERSAL, THEY CAN BE INSTALLED ON EITHER SIDE.

NOTE 2: WITH THE 10" PLATFORM, ONLY ONE ATTACHMENT POINT IS AVAILABLE. COMPLETE THE INSTALLATION WITH A WOOD SCREW. THE STRUCTURE REMAINS SOLID AND ALLOWS THIS MODIFICATION.

NOTE 3: THE 16" PLATFORM IS NOT COMPATIBLE WITH HEADBOARD.

6

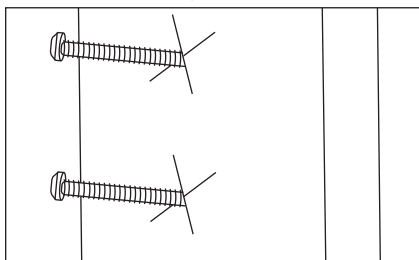

FIX THE METAL PLATES TO THE HEADBOARD WITH 4 X $\frac{1}{4}$ -2 $\frac{1}{2}$ " BOLTS ALREADY INSTALLED ON THE HEADBOARD.

IT IS HIGHLY RECOMMENDED TO TIGHTEN ALL BOLTS ON THE REFLEXX BASE AFTER SIX MONTHS OF USE.